

# Changing Sight Blade

## REMOVE OLD BLADE

1. Using a standard screwdriver on windage adjustment screw and a spanner type screwdriver on the split nut on the opposite side, brake the stake and unscrew nut.
2. Slide blade out of the housing. Remove and save spring
3. After removing any burrs and cleaning up the treads on the screw so not to damage the female threads inside the tube, unscrew adjustment screw from tube and discard.

## INSTALL NEW BLADE

4. Install a new blade into the cavity and work from side to side. Remove blade, and inspect for wear marks, Some light filling may be needed to achieve a perfect fit.
5. Install screw into blade and insert spring on opposite side.
6. Install blade assembly into housing. Once your satisfied with the general location of the blade install the split nut. See step one. Stake the sight on a hard surface.

