


Recon Rail Mounting Instructions

It is recommended that
a professional pistolsmith install
this unit.

This mount has been drilled and tapped so
that it may be mounted under the dustcover
of full 1911 style pistols that conform to the
original design.

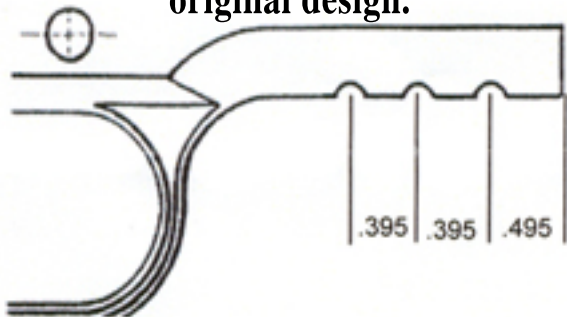

Using a #4x60° center drill, drill three
holes from the inside of the dustcover at
the locations indicated in the sketch until
you achieve a hole diameter of .225 - .235. The
holes will appear elliptical so take your
measurements from front to back not left to
right. For a more permanent installation
welding or silver soldering is recommended,
Caspian Arms Ltd.